

Saturn[®]

ST-TPC0708

TABLET PC



GB

TABLET PC

Dear Buyer!

We congratulate you on having bought the device under trade name "Saturn". We are sure that our devices will become essential and reliable assistance in your housekeeping.

Avoid extreme temperature changes. Rapid temperature change (e.g. when the unit is moved from freezing temperature to a warm room) may cause condensation inside the unit and a malfunction when it is switched on. In this case leave the unit at room temperature for at least 1.5 hours before switching it on.

If the unit has been in transit, leave it indoors for at least 1.5 hours before starting operation.

POWER BUTTON USAGE

Turn On: Press the power button and hold for 2 seconds.

Turn Off: Press the power button and hold for 2 seconds tap Power off tap OK.

Reboot: Press the power button and hold for 2 seconds Tap Reboot tap OK.

Airplane mode: Press the power button and hold for 2 seconds tap Airplane mode.

Silent mode: Press the power button and hold for 2 seconds tap Silent mode.

Force Off: If device does not respond, press and hold the power button for 5 seconds. (Warning: Force off could lead to unpredictable system errors!)

Reset: Pressing the reset button could reset the device. It will clear the all data. Please be careful with the function.

★ After the current reset function cannot restart, can only be turned off, so you need to press the power button restart the device after reset.

TOUCH-SCREEN NAVIGATION

The touch-screen allows for quick, easy and convenient navigation for all applications. Refer to the following method to operate the touch screen with the finger pulp:

Tap: Quick tap & release on an item on the screen.

Touch & hold: Touch and hold in place approximately 2 seconds, and then release to display an options window.

Finger slide: Touch & slide your finger across the screen and then release.

Two points to zoom in or out: Press and hold any two points relative or opposite direction to drag in desktop, video play interface, picture view interface and so on. It will zoom in or out the interface.

★ To avoid scratching or crushing, do not place objects on the touch screen surface.

U-DISK

Insert U-Disk

Insert your U-disk into the device via USB host transfer cable. When ready for use, enter into the file browser, switch to the USB folder to view it.

Remove U-Disk

Close all applications or documents which have been opened on the U-disk. Tap  , Settings, Storage, USB storage, Unmount this storage device. When it displayed Mount this device and then you can unplug the U-disk.

☆ Do not insert and remove the U-disk repeatedly in a short time, as this may cause damage to the U-disk.

USING MICRO-SD CARD

☆ The device supports a maximum 32GB micro SD card.
Insert your card into the microSD slot until it clicks into place. It's OK.

Remove micro SD Card

Close all applications or documents which have been opened on the card. Tap , Settings, Storage, SD card, Unmount this storage device. When it displayed Mount this device and then press the card lightly; it is partially ejected allowing you to pull the card out.

☆ Do not insert and remove the SD Card repeatedly in a short time, as this may cause damage to the card.
☆ We recommend using major brands of memory cards to avoid incompatibility.

GETTING STARTED

Charge the device

☆ It is not recommended to use the device while charging.
Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

Turn the device on

Press & hold the power button 2 seconds.

Wi-Fi Network Setup

Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.

1. Tap  Settings.
2. Slide Wi-Fi switch to turn on.
The device automatically scans and lists all local Wi-Fi Network found. A lock indicates secure Wi-Fi networks that require input password to connect.
3. Tap the desired network to which you want to connect. Enter the Network Password if applicable. Tap Connect.
4. Tap  to return to the Desktop screen.
☆ If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap Add Wi-Fi network and follow the prompts to add your network.

USB device mode options

Before using this feature, please connect to PC via the Mini USB cable.

USB debugging

Debug mode used to debug program for developers. ADB driver needs to be installed before using this mode. Installation method as follows :

(1) First switch on the device to Install Driver mode, and then find the "CD driver"(such as F:) on your PC. Use the resource manager to open the CD drive, then copy all files in the folder (\adb_driver) to your PC;

(2) And then switch to USB debugging mode on the device. If the PC-side prompts to install the driver, select manual installation, and specify the drive path to the location where you saved the ADB driver.

Media Transfer Protocol(MTP)

Media transfer protocol (MTP) mode used to synchronize transmits data and the users can copy, paste or delete the files in the device. If this is the first time using this mode on your PC, you need to install the driver. Installation method as follows :

Firstly, switch to Install Driver mode on the device, and then your PC will automatically pop-up driver installation interface, users need only follow the prompts, and reboot the system after the installation completed. (If not, please go to the Microsoft official website to download Media Player 11 upgrade package and install.)

Install Driver

Install driver mode used to install the driver for USB debugging and media transfer protocol (MTP) mode. The media transfer protocol (MTP) mode driver only for Windows XP, Windows 7 support by default, not need to install.

☆ You can also refer to the readme.txt in the "CD drive".

DESKTOP



1. Back.
2. Home.
3. Recent Apps.
4. Hide status bar.
5. Current time.
6. Screen capture.
7. Volume.
8. Wireless network
9. Battery Status.
10. Google search.
11. Voice search.
12. Add Widgets/Apps shortcuts or setting wallpapers and more.
13. Tap to view the applications screen

Through add icon  or in the desktop make two points to zoom in the interface can make many personalized operation, such as, add widgets, application shortcuts, set wallpaper, add bookmarks, email accounts and set up the shortcut.


☆ Tap on any application icon to launch it.

☆ Touch, hold and then slide icons to reposition them on the screen.

☆ Touch, hold and slide icons onto  to remove them from the Desktop screen.

SCREEN LOCK

Can be set to automatically lock screen or quickly press the power button to manually lock screen. The system provides four lock screen style for users. You can enter Settings, Security, Lock Screen to switch. Lock screen displays the following:

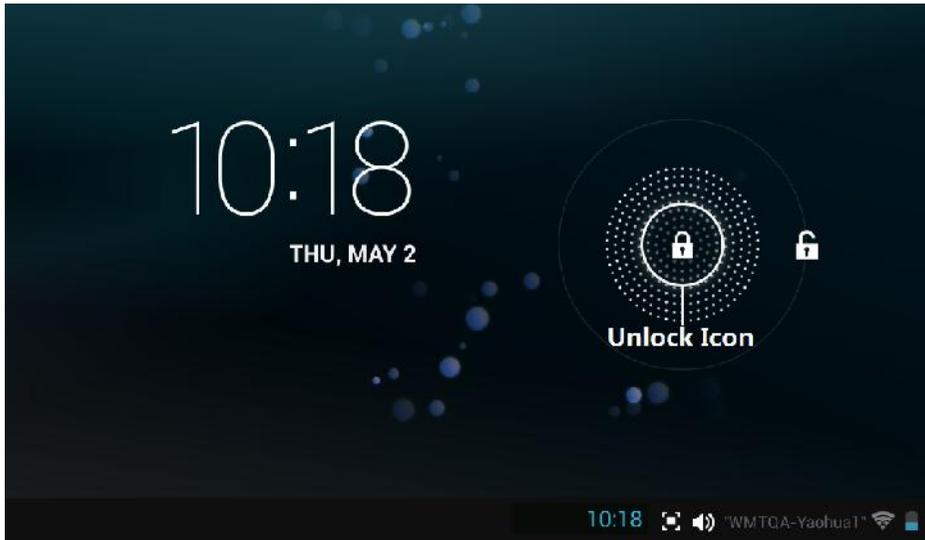

Tap the unlock icon and drop it to the right and out of the circle to unlock.

PRE-LOADED APPLICATIONS

	People	Create a list with e-mail contacts
	Clock	It can display the time and set the alarm.
	Browser	Access internet.
	Calendar	Calendar.
	Camera	Take normal photos, panoramic photos and take video.

	Calculator	Do calculation.
	My Recorder	Recording and playback of recorded audio.
	Email	Send/Receive email using your existing email addresses.
	File Browser	File manager application for viewing and managing files and apps. Use to install Android apps, and to backup files to your SD card.
	My Music	Play and manage audio files.
	Gallery	Play, view, and manage video and photo files.
	Picture Capture	Capture image of the screen.
	Voice search	Voice search.
	Google	Local search and online search.
	Downloads	View the downloads and the download progress.
	Settings	Multiple settings for personalizing and enhancing your Device.

☆ To move an icon to the Desktop screen, touch & hold the icon, and then release it when it appears on the Desktop screen, or click  icon. Then click on the icon which you want to add to desktop in the App shortcuts below this interface, the icon will automatically move to the desktop.

☆ Touch, hold and then slide icons to reposition them on the screen.

☆ Touch, hold and slide icons onto  to remove them from the Desktop screen.

STATUS AND NOTIFICATION AREA

On the Desktop screen, click the icons which in the state bar to view more state information and events.



Airplane mode	Switch airplane mode.
Wi-Fi	Access to Wi-Fi settings interface.
Auto-rotate screen	Auto-rotate switch. After opening, and the screen will automatically rotating screen with gravity induction.
Brightness	Setting screen brightness.
Notifications	Open or close the notification.
Settings	Access to settings.

APPLICATION MANAGEMENT

Install Android Applications

☆ There are many interesting and free Android applications that can be found on the web. Such as launch your web browser and do a search for "Android applications". Purchased or free Android applications that you have downloaded to your computer can

be installed quickly & easily on your Tablet using the  File Browser or task manager application.

1. Copy the .apk files that you want to install onto a SD card or USB device insert or connect to your Device.
 2. Tap the  File Browser application icon.
 3. Tap  or  and locate the folder in which the .apk application files were saved.
 4. Tap on a .apk file  Install.
- The application is installed and the application icon is added to the Applications screen.
5. Tap Open to launch the application now, or tap Done to return to the File Browser screen.

Download Android Applications direct from a Website

You can download Android applications directly from websites, and then quickly and easily install them on your device.

1. Tap the  browser application icon to launch the internet.
2. Enter the desired website URL, and tap the download link for the application you want to install on your device.
3. After the download is completed, tap  Downloads. Open the applications from app list.

Uninstalling Android Applications

You can also quickly and easily uninstall the Android applications that you have installed.

1. Tap , Settings, Apps, All.
2. Tap the application you want to uninstall  Uninstall.
3. Tap OK to confirm the Uninstall.

CLOCK



Tap the  Clock application icon. You can see the time and date.

Alarm

You can use your device as an alarm clock by setting multiple alarms.

Add Alarm

1. Tap the  Clock application icon.
2. Tap  Set alarm  Add alarm.
3. Set up your alarm as desired.
4. Tap OK.
5. Turn on the right switch of the alarm clock which need to be enabled.

Shut Off Alarm Alert

When a scheduled alarm is activated, a pop-up window with the alarm title appears.

- Drop  to  if you want to be reminded again in 10 minutes.
- Drop  to  to cancel the alert.

Turn Alarm on

1. In the Alarm list, find the desire alarm.
2. The switch button to open the alarm clock on the right side, the switch button from  to .

Edit Alarm

1. Enter the alarm list, click the alarm time to edit.
2. After editing, tap OK.

Delete Alarm

1. Enter the alarm list, drag left or right to delete the alarm you want to delete.

BROWSER

Users can connect to the Internet through browser.

Click the browser icon on the Desktop , and then you can open the Web browser.



CALENDAR



Tap the  Calendar application icon. For the first time using the Calendar, you need to add an Exchange account. Enter account email address and password. Enter the system Settings **Account & sync** Add account. According to the prompts, complete the setting. After then you can use the calendar. Only to view the calendar need not to add Exchange account.

Add Event

1. On the Calendar screen, tap on the date to which you want to add an event.

2. Tap on the event time .
3. In each field, enter the details of the related activities.
4. Tap Done.

Click the date time in the upper left to choose the calendar you want, such as DAY, WEEK, MONTH and AGENDA display mode.

- ☆ Dates with gray bars indicate scheduled events.

CAMERA



Tap the  Camera application icon.

Take Pictures

1. Tap  switch to video, and you can take pictures.
2. Tap  take a picture.
3. The picture will be saved.
4. Sliding the screen from right to left, and you can enter the gallery to browser the complete picture.
5. Press Back to the Camera.
6. Tap  to exit the Camera and back to the Desktop.

Take Videos

1. Tap  switch to video, and you can take videos.
 2. Tap  to begin and tap  to stop.
 3. The video will be saved.
 4. Sliding the screen from right to left, and you can enter the preview list.
 5. Press Back to the Camera.
 6. Tap  to exit the Camera and back to the Desktop.
- ☆ During video recording you can click the frame quickly to take pictures. Quick shot function does not terminate the video recording.

Single-motion Panorama

For capturing larger scenes, tap  icon and switch to single-motion panorama mode. In this mode, the user starts an exposure and then slowly turns the Camera to encompass as wide a perspective as needed. The Camera assembles the full range of continuous imagery into a single panoramic photo.

☆ You can press Viewfinder long, or on the top right screen tap , then tap , enter camera settings menu. In the dialog box, click select storage device, to choose the files are stored in the Local, SD card or USB storage.

CALCULATOR



1. Tap the Calculator application icon.
2. Tap the numbers and sign of operation to do the calculation.
3. Tap CLEAR to clear the result one by one, tap and hold CLEAR to clear all.

MYRECORDER



1. Tap the recorder icon.
2. Tap the record icon to start recording.
3. Tap the record icon to stop record.
4. Tap the play button to play the voice of recording.

EMAIL

★ POP3, SMTP and Exchange accounts are supported.

Add Email accounts

You can enter one or more personal email addresses that you would like to access through your Tablet.



1. Tap the Email application icon.
 2. On the Account setup screen, tap in the Email address entry field enter your email address.
 3. Tap in the Password entry field enter your email password.
 4. Tap Next.
 5. Manual Setup (optional): The server settings are automatically populated based on your email account provider (i.e., gmail.com, etc). However, if you need to change the server settings tap Manual Setup and make necessary changes.
 6. According to the selected mailbox server, enter or select the parameter and server type, and then tap Next.
 7. (Optional): Enter a name for the account.
 8. Enter name for outgoing message tap Done.
- ★ After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).

Email Inbox



1. Tap the Email application icon.
2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the Accounts screen.
3. Tap on the desired email account tap Inbox.

Open Email Message

1. On the Inbox screen, tap on an email to open it.
2. For attachments, tap Open to launch appropriate application, or tap Save to save attachment to a SD card.
3. To reply, tap Reply or Reply all.
 - a. Tap in the Compose Mail entry field to enter your reply message.

- a. Tap Send to send immediately, Save as draft to save without send or Discard to discard without saving or sending.
4. To delete the email immediately, tap Delete.

Compose New Email Message



1. On the Inbox screen, tap .
2. Enter the e-mail address in the recipient field. If you want to add Cc or Bcc recipients, tap **Add Cc/Bcc** , and then enter the recipient's email address.
3. Tap in the Subject entry field to enter your desired subject title.
4. Tap in the Compose Mail area to enter your personal message.
5. If desired, tap to attach a file.
6. When ready to send the email, tap .

Edit Email Accounts



1. Tap the Email application icon.
2. On the Inbox screen, tap Settings.
3. Set your desired preferences to customize your email account.
4. Tap to return to the Inbox screen.

Delete Email Accounts

★ If you have multiple accounts, and you delete the account designated as the default account, the next email listed is automatically set as the default.



1. Tap the Email application icon.
2. On the Inbox screen, tap Settings.
3. Click the account you want to delete.
4. In the pop-up Account options window, tap Delete.
5. Tap OK to confirm the deletion.

Set Default Email Account

You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.



1. Tap the Email application icon.
 2. On the Inbox screen, tap Settings.
 3. Tap the desired account.
 4. In the right settings list, tap Default Account to select it.
- If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.

FILE BROWSER



Tap the File Browser application icon to view the files on all storage devices (Internal memory, SD card, USB device), and to quickly & easily install Android application on your Tablet.
Use the icons across the top of the screen as follows:

-  Local Internal Flash (ROM)
-  SD SD Card
-  USB USB Storage
-  Paste
-  Back to the previous folder
-  Switch folder display mode.
-  Menu

Copy Media between Computer and Tablet

You can use the File Browser to copy files between an external storage devices and your computer. You can first copy the desired files onto a SD card or USB device.

★ The internal device storage is titled "Local", a memory card "SD", and a USB storage device is titled "USB".

★ The instructions below are for copying from a SD card or USB storage device into the device. You can use the same method to copy from the device to a SD card or USB storage device, and then connect the storage device to your computer to transfer the files into the desired folder on your computer.

1. Tap GoTo, select  or  to display the contents of your storage device.
2. Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desire tap Copy.
3. Tap GoTo, select  Internal Memory tap on the folder into which you want to copy the file tap .

Delete files

Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desire tap Delete, OK to confirm the deletion.


MY MUSIC

★ Audio file formats supported: MP2, MP3, WAV, AAC, WMA.

Play Music

1. Tap the  My Music application icon.
2. Select an audio file from All/Albums/Artists/Directories/My Favorites/User Defined Playlists to play it.
3. Tap the Pause  icon to pause your music.
4. When you playing the music you can tap  or  to return to the previous screen.

Click  switch to the currently playing interface. It is shown as follows:

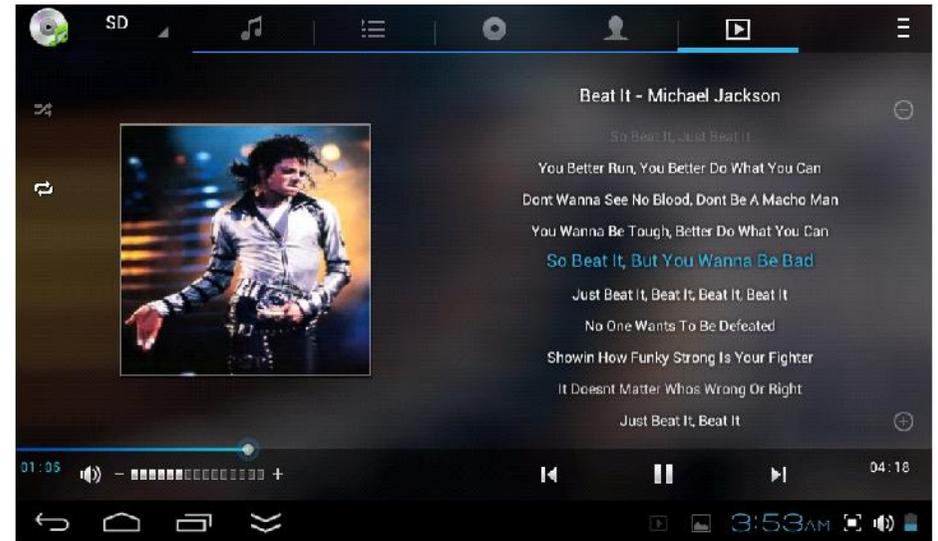

At this interface, you can do: view/ download the lyrics, display album photo or spectrum, play/ pause, switch to the previous/ next, loop and random operation etc.

Create Music Widget

Through the Music Widget can be quickly play the music.

On the desktop tap  icon. In the pop-up list select Widgets select Music Widget.

The Operation with Music and Playlist

Add playlist

1. Enter  Play list interface click .
2. Input the playlist name.
3. Tap Save.

Rename or Delete playlist

Switch to Display mode, tap the playlist tap  Enter a new name in the dialog box, and click Save. If you want delete the playlist, click  click Save.

Add music

1. In the all song, album, and artist list, tap the music and hold for switch to multi-select mode.
2. Select the music which you want to add to the list (if you do not want to add, tap it again to cancel).
3. Tap Add to playlist, and then select a playlist.

Delete music

Tap and hold on the music you want to delete tap Delete.

Sort by title or date added

In the all song interface, on the upper right click the  , in the pop-up list select Sort by title, and then click the alphabetical of the right hand, the interface will quickly jump to the songs match the first letter (including the first letter of the pinyin) in the alphabetical list. If you select Sort by date added, all songs will sorted by add date.



GALLERY

Switch the view storage area
In the root directory, on the top left click the Local, SD or U-Disk to switch the view storage area.

Classification of photos and videos list

In the root directory, on the top left click the Albums, Locations, Times, People or Tags to classify the photos and videos. In the classification file folder, on the top left click Filmstrip view or Grid view to switch the view display mode.

View, play the photos and videos

Photo

In the classification folder, click on the photo thumbnails to open the photo, and on the

top right of the folder interface tap  Slideshow to playing slide.

Video

In the classification folder, click on the view preview. Enter to the video preview interface, and click the play button in the video preview to play the video.

☆ In preview picture interface on the top right screen click  to operate the corresponding photos (including zoom in/ zoom out, share, rotate, trim, photos set to, adjust the current display scale, show details)

☆ In preview video interface, on the top right screen click  to operate the corresponding videos (including trim and details).

The operation with picture or video playback

DLNA

In preview photo interface (or video playback interface) on the top right click  follow the prompt to operate you can easily share the tablet picture (or video) to support DLNA TV broadcast.

Playback of the video floating window

In video playback, on the top right click  to switch to playback of the video floating window.

☆ Ordinary video playback and floating window playback all are supported by two points zoom to adjust the size of the video screen.

☆ Floating window video will continue to play after you switch to other interface (ex: browser the website, desktop, run the software etc.)

☆ You can easily drag the floating window to adjust the position in the screen.

Delete the photos and videos in the list

On the top right of the screen, tap  icon tap Select album or Select item. Select the album, image thumbnails or video preview which you want to delete, tap



OK. If you want to delete a single picture (or video), please enter the folder, select the picture (or video), tap  , or delete it in the image thumbnails (or video preview) , tap  OK.

SCREEN CAPTURE

You can capture a screen image by tapping  at any time.



Tap the  Screen Capture application icon to set options for a screen capture.

Select a delay timer to capture the screen (seconds) .

Select the default storage device.

Show screen capture icon in status bar.

View software version information.



After the images are saved, they can be viewed through  Gallery application.

WI -FI

Tap Settings Wi-Fi, enter into Wi-Fi settings.

1. Slide the Wi-Fi switch to turn on Wi-Fi.
2. All the wireless network in the vicinity will be listed, click to select the name you want to connect to wireless network;
3. If the wireless network is connected successful before, the wireless network information will be saved in the pop-up window, select "Connect" starts to connect, choose "forget" to remove wireless network information;
4. If the wireless network is not encrypted, in the pop-up window, select "Connect" Start Connection;
5. If the wireless network is encrypted, enter the password in the pop-up window, and click "Connect" Start Connection;
6. When internet connections are successful, the wireless connection icon in the bottom status bar appears.

3G NETWORK

First of all you need to buy 3G wireless network card according to China Telecom, China Mobile or China Unicom. The currently supported on the 3G card type please refer to 3G dongle support list or appendix.

We strongly recommend on buy the 3G Network Cards, in order to ensure normal 3G Internet access. Please come to the prepaid card into the purchase of 3G Network Cards, put the 3G network card insert into the USB host transfer cable and then insert device. At this time it will be bright lights on the 3G network card, which indicated that it could begin to connect the 3G network.

PPPoE SETTINGS

Before using this feature, connect the USB network card via the USB host transfer cable access to device.

1. Tap Settings PPPoE settings .
2. Input name and password then click connect to access the broadband network.

ETHERNET

Before using this feature, connect the USB network card via the USB host transfer cable access to device. When the USB network cable plugged into the USB network card, you

will see the bottom of status bar ETH symbol  appears.

1. Tap Settings, Ethernet.
2. The device can automatically obtain IP address to connect to the network. You can also choose to manually set the IP address to get connected.

SETTINGS

Wireless & networks	Wi-Fi	Turn on/off Wi-Fi, Set up & manage wireless access points.	
	Ethernet	DHCP	Automatic assign IP address
		Use Static IP	Manual assign IP address
	PPPoE settings	Set up ADSL network	
	3G network	Set up 3G network.	
	Data usage	View of data usage	
	More	Airplane mode	Disable all wireless connections.
VPN		Add Virtual Private Networks (VPNs).	
Tethering & Portable hotspot		USB tethering.	
		Portable Wi-Fi hotspot. Set up Wi-Fi hotspot.	
Sound	Volumes	To adjust the Media volume.	
	Default notification	Select desired ringtone sound.	
	Dial pad touch tones	Turn on/off dial pad touch tones.	
	Touch sounds	Turn on/off touch sounds.	
	Screen lock sound	Turn on/off lock sounds.	
Display	Brightness	Adjust the screen brightness as desired.	
	Wallpaper	Set up wallpaper	
	Auto-rotate screen	Auto-rotate switch.	
	Allow hiding the status bar	Allow hiding the status bar.	
	Show full-screen gesture tip	Full-screen gesture prompts.	
	Sleep	Adjust the delay before the screen automatically turns off.	
	Daydream	Set the daydream.	
	Font size	Set the system font size.	
Storage	Wireless display	Search and connect available wireless displays.	
		View, uninstall, and format the ROM disk, SD card and USB storage.	

	Battery		View the usage of the battery.	
	Apps		View and uninstall applications	
	Users		Modify owner info, add, modify, delete new users and their associated information.	
	Location access	Access to my location		Let apps that have asked your permission use your location information.
		WiFi network location		Let apps use Google's location service to estimate your location faster. Anonymous location data will be collected and sent to Google.
		Screen lock		
		Owner info		
	Security	Encrypt device		Require a numeric PIN or password to decrypt your device each time you power it on.
		Make passwords visible		
		Device administrators		View or deactivate device administrators
		Unknown sources		Allow installation of non-Market apps.
		Verify apps		Disallow or warn before installation of apps that may cause harm
		Trusted credentials		Display trusted CA certificates.
		Install from SD card		Install certificates from SD card.
		Clear credentials		Remove all certificates.
Language		Setting system language.		
Language & input		Spelling correction, personal dictionary, keyboard and input methods, Voice search, text to speech (TTS) output, and pointer speed.		

		Back up my data	Back up app data, Wi-Fi passwords, and other settings to Google servers.
	Backup & Reset	Backup account	Backing up to debug-only private cache.
		Automatic restore	When reinstalling an app, restore backed up settings and data.
		Factory data reset	Erases all data on tablet.
Accounts	Add account	Automatic date & time	Use network-provided time
System	Date & Time	Set date	Set date
		Set time	Set time
		Select time zone	Select time zone
		Use 24-hour format	Choose 24-hour format or 12-hour format.
		Choose date format	Select date format.
	Accessibility	Talkback, Magnification gestures, Large text, auto-rotate screen, speak passwords, Accessibility shortcut, Text-to-speech output, Touch & hold delay, Enhance web accessibility	
	Developer options	Take bug report, Desktop backup password, Stay awake, Protect SD card, Super user setting, USB debugging, Power menu bug reports, Allow mock locations, Select debug app, Wait for debugger, Verify apps over USB, Show touches, Pointer location, Show layout bounds, Show GPU view updates, Show hardware layers updates, Show GPU overdraw, Show surface updates, Window animation scale, Transition animation scale, Animator duration scale, Disable HW overlays, Force GPU rendering, Force 4x MSAA, Simulate secondary displays, Strict mode enabled, Show CPU usage, Profile GPU rendering, Enable OpenGL traces, Enable traces, Don't keep activities, Background process limit, Show all ANRs	
	About device	System updates, Status, Legal information, Model number, android version, Kernel version, Build number.	

FREQUENTLY ASKED QUESTIONS

Android

Q: What Android OS version is on my Device?

A: 4.4

Basic Device Functionary

Q: Do I have to charge the battery before use?

A: You should charge the battery for at least 6 hours in the off status. You can use the device while it is charging, but this method to charge is not recommended.

Email

Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if your account is supported.

Media Cards

Q: Which media cards are compatible with my Device?

A: micro SD cards.

Music

Q: What type of music files can I play on my device?

A: MP2, MP3, WAV, AAC, WMA

Q: How do I add music files to my device?

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Photos

Q: What type of photo files can I view on my device?

A: JPG, JPEG, BMP and PNG.

Q: How do I add photo files to my device?

A: Copy the photo files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Video

Q: What type of video files can I play on my device?

A: Video file formats supported: MPEG1/2/4, H263, H264, VC1, Real Video, Motion JPEG.. The largest video format is supported 1080P(1920×1080) resolution.

Q: How do I add video files to my device?

A: Copy the video files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Wi-Fi

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No. The Wi-Fi adapter is built-in to the device.

BATTERY MANAGEMENT

The battery is not fully charged out of the box, so it is recommended that you charge the battery for at least 6 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

Use your Tablet at least once a week.

Charge the battery regularly and fully.

Never leave the battery fully discharged for a long period of time.

Always keep the device and the battery away from heat.

Charge battery

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

When fully charged, the battery icon displays as .

A fully discharged battery takes approximately 6 hours to fully charge in the off status, but you can use the device while plugged in when desired.

SPECIFICATIONS

Display: 7"

OS: Android 4.4

Resolution: 800x480

Screen Type: TFT
 Aspect Ratio: 16:9
 CPU: Cortex A9, Rockchip 3026
 Number of cores: Dual core
 Frequency: 1,2 GHz
 GPU: Dual Mali 400
 RAM: 512 MB
 Flash Memory: 4 GB
 Storage Card Type: TF
 Wi-Fi 802.11 b/g/n
 Port USB: 2.0
 Camera front: 0.3 MP
 Camera back: 2.0 MP

SET	
Tablet PC	1
Power adapter	1
USB cable	1
Instruction manual with warranty card	1
Package	1

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center.

The manufacturer reserves the right to change the specification and design of goods.

RU

! "Saturn".

1,5 1,5

2

Power off () OK. 2

Reboot () OK. 2

22

Airplane mode () 2

Silent mode () 2

(: !)

5

☆

☆

U-DISK

U- U- USB USB

U-

U-

☆ Settings (), Storage, USB storage, Unmount this storage device. Mount this device,

U- U- U-

☆ SD- SD- 32GB.

SD-

☆ Settings (), Storage, SD card, Unmount this storage device. Mount this device,

☆ / SD-

☆

23

☆

6 ,). (

2

1. Wi-Fi

2. Wi-Fi. Settings (Wi-Fi).

3. Wi-Fi. Network Password, () Wi-Fi. Connect ().

4. ☆ Wi-Fi Add Wi-Fi network (Wi-Fi)

USB

USB.

USB

ADB

(1) : "CD- " (, F:) Install Driver (

(\adb_driver) ; CD- , USB debugging (USB).

(2) ADB.

(MTP)

Install Driver (),

Media Player 11 .) Microsoft,

(MTP). USB

Windows XP. Windows 7 (MTP)

☆ readme.txt "CD drive".



1.

2.

3.

4.

5.

6.

7.

8.

9.

10. Google

11. /

12.

13.

+


☆

☆

☆

X

(), Lock Screen (Settings (), Security

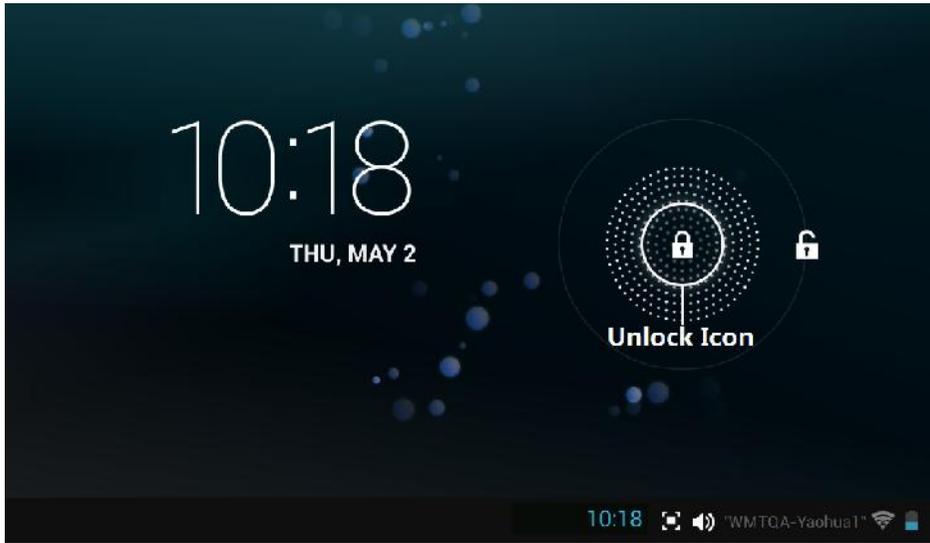

(Unlock Icon)

		
		
		
		Android SD.
		
		
		
		
	Google	
		
		

☆



☆



☆



Wi-Fi	Wi-Fi.

☆ applications".

Android

Android

"Android

Android,

Task manager (

File

USB

Browser (

SD

USB .apk ,

File Browser (

SD USB

.apk

Install (

Done (

Open (

File Browser (

Android

Android

1.

2.

3.

Downloads (

Android

Android,

1.

2.

3.

Settings (

), Apps (

), All (

Uninstall

OK

Clock.

1.

2.

3.

Clock.

+

- 4.
- 5.

OK.

10




- 1.
- 2.



- 1.
- 2.
- 1.

OK.

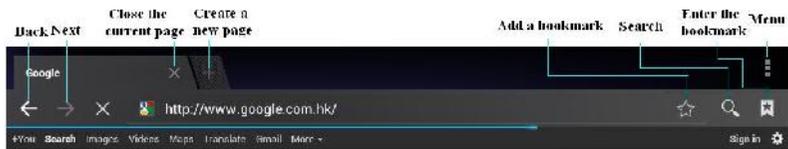

Google
Hong Kong



Google.com is offered in: 中文(繁體) 中文(简体)

Advertising Privacy & Terms About Go to Google.com View Google in Tablet | Classic



Calendar.

- (
-)

), Account & sync (

Settings), Add account (

- 1.
- 2.
- 3.
- 4.
- ☆

Done (



Camera.

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- ☆



Back (



Back (



☆



USB.



: Local, SD-



Calculator.

- 1.
- 2.
- 3.

CLEAR (),
CLEAR (),



1.



2.



3.



4.

☆

POP3, SMTP Exchange.

e-mail



Email.

- 1.
- 2.
- 3.
- 4.
- 5.

Next ().
Manual Setup ():

(gmail, com ...).
Manual Setup ()

- 6.
- 7.
- 8.
- ☆

Next ().

():
Done ().

Post Office Protocol (POP) Simple Mail Transfer Protocol (SMTP).



Email.

1.

2.

Accounts ().

3. Inbox ().

1. Inbox ()

2. Save (), Open (),

3. Reply () Reply all

().

a. Send (), Save as draft

(Discard (),

4. Delete ().

1. e-mail Cc

2. Add Cc/Bcc
3. Subject (),

4. Compose Mail,



5.



6.

e-mail



Email.

- 1.
- 2.
- 3.
- 4.

Settings ().



e-mail

☆

e-mail

1. Email.

2. Settings ().

3. Account options Delete ().

4. OK

1. e-mail

2. Email.

3. Settings ().

4. Default Account ()

e-mail

File Browser (SD-Android USB), (ROM)

Local SD- USB

SD- USB

SD- USB, "Local", "SD", SD- USB,

GoTo (), SD USB

Copy ().

3. GoTo (), Local

Delete (), OK


: MP2, MP3, WAV, AAC, WMA.

1. My Music.

2. Defined Playlists (/ All /Albums/ Artists/ Directories/ My Favorites/ User

3. Pause (),

4. SD

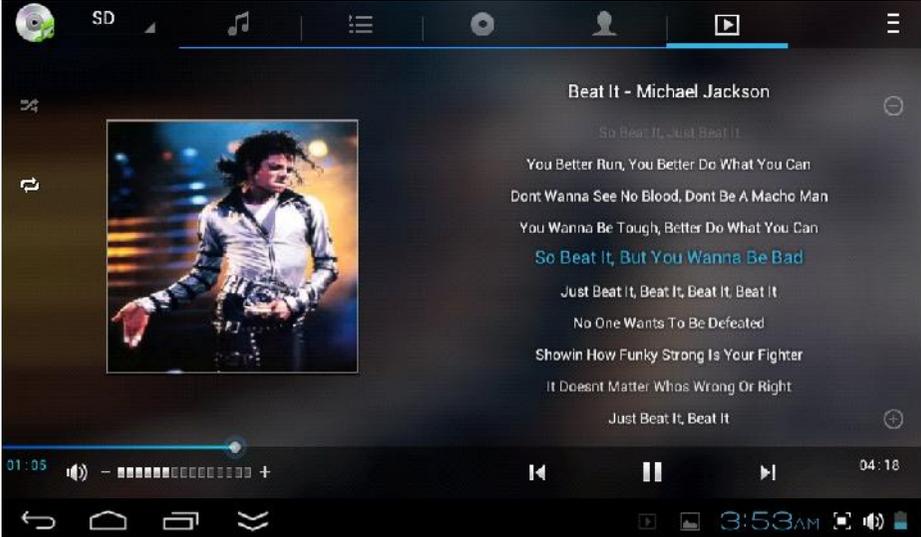

SD

Beat It - Michael Jackson

So Beat It, Just Beat It

You Better Run, You Better Do What You Can

Dont Wanna See No Blood, Dont Be A Macho Man

You Wanna Be Tough, Better Do What You Can

So Beat It, But You Wanna Be Bad

Just Beat It, Beat It, Beat It, Beat It

No One Wants To Be Defeated

Showin How Funky Strong Is Your Fighter

It Doesnt Matter Whos Wrong Or Right

Just Beat It, Beat It

01:05 04:18

3:53 AM

Widgets () Music Widget ().

1.  Save ().
2. Display mode,  Save ().
3.  Save ().  Save ().

().

1. all song (), album () artist
2. ()
3. Add to playlist (), Delete

().

Sort by title ().

Sort by date added ((),)

 Local, SD U-Disk ,

Locations (), Times (), People () Albums (), Tags (), Filmstrip view () Grid view ()

 Slideshow (),

☆  /

()

☆  ()

DLNA ()

DLNA. ()

☆  Select item (). Select album () OK. ()

☆   OK.



Screen Capture,

()



Gallery.

WI-FI

Settings ()

Wi-Fi, Wi-Fi

Wi-Fi.

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.

"forget" (),

"Connect" ()

"Connect" ()

"Connect" ()

3G

China Telecom, China Mobile appendix ()

3G China Unicom.

3G- 3G dongle support list

3G Network Cards

3G

USB,

3G- 3G-

USB,

PPPoE

USB

1. USB

Settings ()

PPPoE settings.

Connect (),

ETHERNET

USB

USB-

USB-

USB



1. Settings ()

Ethernet.

IP-

IP-

	Wi-Fi	/ Wi-Fi,	
	Ethernet	DHCP	IP-
		IP	IP
	PPPoE	ADSL	
	3G	3G	
		VPN	
			USB-
			Wi-Fi.
			Wi-Fi.
			/
			/
			/

		« - - »,
		SD- USB, USB, GPU, GPU HW GPU- 4x MSAA, (Strict mode), CPU, Profile GPU traces, traces, OpenGL ANRs
		Android,

Android OS ?
: 4.4
?
?
?
/ ?
POP3 SMTP.

SD- ?
MP2, MP3, WAV, AAC, WMA ?
USB () ? SD- File Browser
JPG, JPEG, BMP and PNG. ?
SD- File Browser (USB
Video, Motion JPEG. (1920x1080). : MPEG1/2/4, H263, H264, VC1, Real 1080P
SD- File Browser (USB
Wi-Fi) ?
Wi-Fi Wi-Fi ?
6
(6)
: 7" : Android 4.4
: TFT : 800 400
: 16:9
: Cortex A9, Rockchip 3026
: 1,2 : Dual Mali 400

Wi-Fi 802.11 b/g/n : 512 M
USB: 2.0 : 4
: 0.3
: 2

USB

1
1
1
1
1



"Saturn".

1,5

1,5

() OK.

Reboot () OK.

Airplane mode ().

Silent mode ().

(!)



★ U-DISK

U-
U-

USB

USB

, Settings (), Storage, USB storage, Unmount this storage device.
★ / / Mount this device, U- U-



SD-

SD

SD-

32GB.

Settings ()

SD-

, Storage, SD card, Unmount this storage device.
★ / / Mount this device,



SD-



()

2

1. Wi-Fi
 2. Wi-Fi.
 3. Settings (Wi-Fi).
 4. Network Password, ()', Wi-Fi.
 5. Connect ().
 6. Add Wi-Fi network (Wi-Fi).
 7. USB
 8. USB.
 9. USB
 10. ADB
 11. (1) "CD- " (CD- F :)
 12. Install Driver (),
 13. adb_driver) ;
 14. (2) USB debugging (USB).
 15. ADB.
 16. (MTP)
 17. Install Driver (),
 18. Microsoft,
 19. Media Player 11 .)
 20. USB
 21. (MTP) Windows XP. Windows 7
 22. readme.txt "CD drive".
 23.
 24.
 25.
 26.
 27.
 28.
 29.
 30.

10. Google
 11. /
 12. /
 13. /


10. 11. 12. 13.

10 11 12 13

1 2 3 4 5 6 7 8 9

14. +
 15. ☆
 16. ☆
 17. X
 18. ☆

19. Screen (Settings (), Security (), Lock

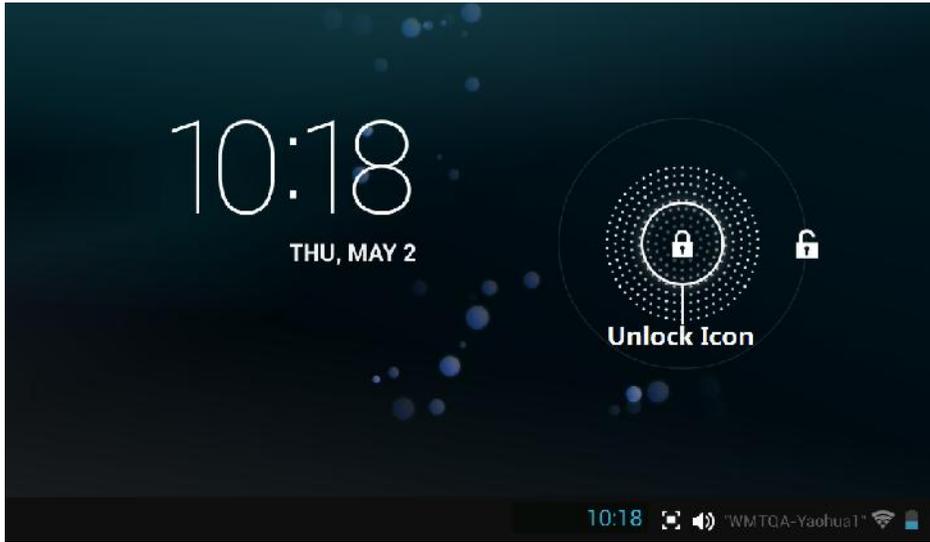

(Unlock Icon)

		/
		Android SD.
		
		
		
		
	Google	
		
		

☆



☆



☆



Wi-Fi	Wi-Fi.

☆

Android

Android "Android applications".

Android, File

Browser (.apk, Task manager (USB). SD

1. USB

2. File Browser ().

3. SD USB

4. .apk. Install ().

5. (), Open (), File Browser (). Done

Android

Android

1. 

2.

3.  Downloads ().

Android

Android,

1.  , Settings (), Apps (), All ().

2. ().

3. OK

 Clock.

1.  Clock.

2. 

3. 

4. OK.

5.



10

1.

2




1.

2.

OK.

1.

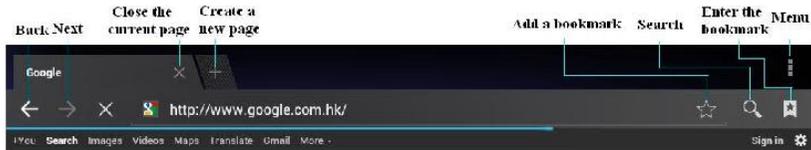

Google.com.hk | 中文 (繁体) | 中文 (简体)

Advertising Privacy & Terms About Go to Google's room View Google in: Tablet | Classic



Calendar.

(

).

), Account & sync (

), Add account (

Settings

1.

2.

3.

4.

Done (



☆



Camera.

1.



2.



3.

4.

5.

Back (



6.

1.



2.



3.

4.

5.

Back (



6.

☆



☆

USB.   : Local, SD-

1.  Calculator.

2. CLEAR (),

3. CLEAR (),

1.   

2.

3.

4. 

☆ POP3, SMTP Exchange.

e-mail

1.  Email.

2.

3.

4. Next ().

5. Manual Setup (): (gmail, com, Manual Setup ()

6. Next ().

7. (): Done ().

8.

☆ Post Office Protocol (POP) Simple Mail Transfer Protocol (SMTP).

1.  Email.

2. Accounts ().

3. Inbox ().

1. Inbox ()

2. Save (), Open (),

3.  Reply ()  Reply all

4. (a. Send (), Save as draft (), Discard (), Delete ().

1. 

2. e-mail

3. Bcc

4. Add Cc/Bcc Subject (), Compose Mail,

5. 

6. 

e-mail

1.  Email.

2.  Settings ().

3.

4. 

☆ e-mail

e-mail

1.  Email.

2.  Settings ().

3. Account options

4. Delete ().

5. OK

e-mail

- 1.
- 2.
- 3.
- 4.

),
e-mail



(
File Browser
SD-
Android
USB),
(ROM)



Local
SD
USB



SD-
USB

USB.
"Local",
"SD",
SD-
USB,
SD-
USB,

GoTo (),
Copy ().

3. GoTo (), Local
Delete (), OK
☆ : MP2, MP3, WAV, AAC, WMA.

1. My Music.
2. Defined Playlists (/ All /Albums/ Artists/ Directories/ My Favorites/ User /)
3. Pause (),
4.

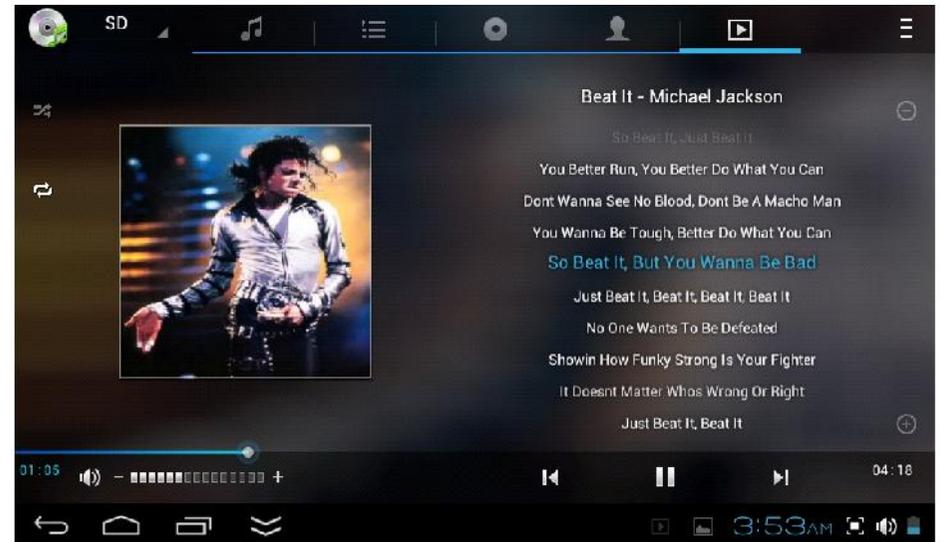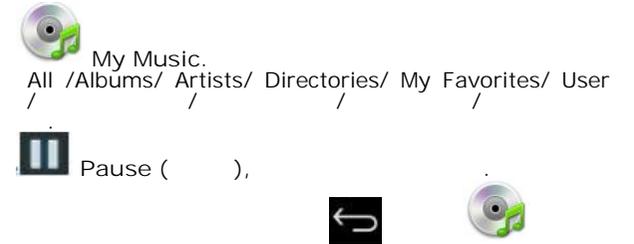

Widgets () Music Widget ().

1. Save ().
2. Display mode,
3. Save ().

all song (), album () artist

1. Add to playlist (),
2. Delete ().
3. Sort by title ().

Sort by date added (),

Local, SD U-Disk,

Locations (), Times (), People () Albums (), Tags (),

Filmstrip view () Grid view ()

Slideshow (),

DLNA

DLNA.

Select item ().

OK. (),

OK.

Screen Capture, ().



Gallery.

WI-FI

Settings () Wi-Fi, WiFi.

- 1.
- 2.
- 3.
4. "forget" (), "Connect" ()
5. "Connect" ()
6. "Connect" ()

3G

China Telecom, China Mobile 3G China Unicom. 3G dongle support list appendix ().

3G Network Cards USB, 3G- 3G- 3G- USB, 3G-

PPPoE

1. USB Settings () PPPoE settings.
2. Connect (),

ETHERNET

USB USB- USB- USB-



1. Settings (), Ethernet.
2. IP- IP-

	Wi-Fi	/ Wi-Fi.	
	Ethernet	DHCP	IP-
		IP	IP
	PPPoE	ADSL	
	3G	3G	

		VPN	
			USB-
			Wi-Fi.
			Wi-Fi.
			/
			/
			/
			SD- ROM USB-

		WIFI	Google, Google.
			PIN-
			CA-
		SD-	SD-

			(TTS) –
			Wi-Fi Google.
		24-	12- 24-
			»,
			«
			SD- USB, USB,

		GPU, GPU, MSAA, GPU- HW (Strict mode), CPU, Profile GPU OpenGL traces, ANRs	4x traces,
			Android,

Android
: 4.4
Android OS
?
?
6 ?
?
POP3 SMTP.
?
SD-
MP2, MP3, WAV, AAC, WMA
?
SD- File Browser (USB
?
SD- File Browser (USB
?
Video, Motion JPEG.
(1920x1080).
MPEG1/2/4, H263, H264, VC1, Real
1080P
?

Wi-Fi)
: Wi-Fi Wi-Fi
?
6
?
6
?
7 "
: Android 4.4
: 800 400
: TFT
: 16:9
: Cortex A9, Rockchip 3026
: 1,2
: Dual Mali 400
: 512 M
: 4
: TF
Wi-Fi 802.11 b/g /n
USB: 2.0
: 0.3
: 2
1
1
1
1
1
1



Saturn®

**INTERNATIONAL
MANUFACTURER'S WARRANTY**

,

MEZINÁRODNÍ ZÁRUKA

INTERNATIONAL MANUFACTURER'S WARRANTY

The Warranty is provided for the period of 2 years or more if the Law on User Right of the country where the appliance was bought provides for a greater minimum warranty period.

All terms of warranty comply with to the Law on Protection of the Consumer Rights and are governed by the legislation of the country where the product was bought. The warranty and free of charge repair are provided in any country where the product is delivered to by Saturn Home Appliances or authorized representative thereof, and where no restriction of import or other legal provisions interfere with rendering of warranty services and free of charge repair.

Cases uncovered by the warranty and free of charge repair:

1. Guarantee coupon is filled in improperly.
2. The product has become inoperable because of the Buyer's nonobservance of the service regulations indicated in the instruction.
3. The product was used for professional, commercial or industrial purposes (except for the models, specially intended for this purpose that is indicated in the instruction).
4. The product has external mechanical damage or damage caused by penetration of the liquid inside, dust, insects and other foreign objects.
5. The product has damages caused by non-observance of the rules of power supply from batteries, mains or accumulators.
6. The product was exposed to opening, repair or modification of design by the persons, unauthorized to repair; independent cleaning of internal mechanisms etc. was made.
7. The product has natural wear of parts with limited service life, expendables etc.
8. The product has deposits of scale inside or outside of fire-bar elements, irrespective of used water quality.
9. The product has damages caused by effect of high (low) temperatures or fire on non-heat resistant parts of the product.
10. The product has damages of accessories and nozzles which are included into the complete set of product shipment (filters, grids, bags, flasks, cups, covers, knives, sealing rings, graters, disks, plates, tubes, hoses, brushes, and also power cords, headphone cords etc.).
11. A defect was a result of inappropriate installing of the appliance by non-specialists of the supplier's authorized service center.

On the warranty service and repair, please contact the authorized service centers of "Saturn Home Appliances".

MEZI NÁRODNÍ ZÁRUKA

Záruka se poskytuje na dobu 2 roky. V případě že Zákon na ochranu spotřebitelů dané země stanoví delší dobu, prodlužuje se záruka na tuto dobu.

Veškeré záruční podmínky odpovídají Zákonu o ochraně práv uživatelů a jsou řízeny zákonodárstvím státu, kde byl výrobek koupen.

Záruka a bezplatná oprava se poskytují v každém státě, kam jsou výrobky dodané společností „Saturn Home Appliances“ nebo jejím zplnomocněným zástupcem a kde nejsou žádná omezení na dovoz nebo jiné právní předpisy omezující poskytnutí záručního servisu a bezplatné opravy.

Případy, na které se záruka a bezplatná oprava nevztahují

1. Záruční list je vyplněn nesprávně.
2. Výrobek byl poškozen kvůli tomu, že zákazník nesplnil pravidla použití, která jsou uvedena v návodu.
3. Výrobek byl používán k profesionálním, komerčním nebo průmyslovým účelům (kromě modelů speciálně určených pro tyto účely, což je uvedeno v návodu).
4. Výrobek má vnější mechanická poškození nebo poškození, vyvolaná tím, že se dovnitř dostala tekutina, prach, hmyz a jiné cizí předměty.
5. Výrobek má poškození, která jsou vyvolaná nesplněním pravidel napájení od baterií, sítě nebo akumulátorů.
6. Výrobek rozebírali, opravovali nebo změnili jeho konstrukci lidé, kteří nebyli zplnomocněni k opravě, bylo provedeno samostatné čištění vnitřních mechanismů a pod.
7. Výrobek má přirozené opotřebování dílů s omezenou dobou použití, spotřebních materiálů atd.
8. Výrobek má vrstvu usazeniny uvnitř nebo zvenku termoelektrických ohřevů, bez ohledu na kvalitu používané vody.
9. Výrobek má poškození, která jsou vyvolána působením vysokých (nízkých) teplot nebo ohněm na termonestabilní části výrobku.
10. Výrobek má poškození příslušenství a nástavce, které jsou dodány spolu s výrobkem (filtry, sícky, sáčky, bafly, mísy, víka, nože, šlehače, struhadla, kotouče, talíře, trubky, hadice, kartáče a také síťové šňůry, sluchátkové šňůry atd.).
11. Vada je důsledkem nesprávné instalace výrobku neoprávněnou osobou.

V otázkách záručního servisu a oprav se obraťte na autorizovanou servisní střediska společnosti „Saturn Home Appliances“.

«Saturn Home Appliances»

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.
- 9.
- 10.
- 11.

: <http://saturn.ua/ru/servis>,
: 0-800 505-27-09

					LCD		
, 4	« C »	8 (988) 993-37-78	+		+	+	+
, 18		8 (8553) 32-22-11 8 (960) 047-22-11	+	+	+	+	+
, 98	« » -	8 (86133) 6-09-84, 8(918) 215-57-75	+	+	+	+	+
, 109	-	8 (86152) 2-81-99	+	+	+	+	+
, 1, 1, 12	« -29»	8 (8182) 44-15-55	+				
, 47	« »	8 (8512) 25-19-39, 8 (8512) 25-12-00	+	+	+		
, 54	" - "	8 (8512) 50-19-97	+		+		
2, 16, 7	« »	8 (8512) 54-67-67, 8 (8512) 54-91-91		+		+	+
15	« »	8 (85141) 3-61-25	+	+	+	+	+
, 32		8 (927) 552-47-21, 8 (937) 122-13-99				+	+
113	« »	8 (3852) 63-94-02	+		+	+	+
, 9, 25		8 (905) 425-60-4-73	+	+	+		
37		8 (8635) 47-47-72	+	+	+	+	+
, 63	« »	8 (86155) 3-11-00, 8 (918) 980-64-75	+	+	+	+	+
, 18	" - "	8 (3535) 23-23-98, 8-922-802-21-58	+	+	+	+	+

	, 84		8 (86559) 2-08-02, 8 (86559) 5-29-71	+	+	+	+	+
36		« » -	8 (3955) 67-00-44, 8(3955) 56-61-93	+	+	+	+	+
	, 3	« »	8(4832) 63-06-00, 8 (4832) 33-15-61		+			
	, 173	« »	8 (8442) 97-50-10, 8 (960) 883-59-00		+			
	, 4		8 (8442) 98-16-47, 8 (8442) 53-06-04	+	+	+	+	+
11		« » -	8 (8442) 37-16-74, 8 (8442) 37-69-03		+			
		« »	8 (961) 688-53-48		+			
	, 9		8 (927) 521-52-00		+		+	+
32			8 (937) 722-68-12				+	+
	, 158		8 (937) 730-66-03		+		+	+
			8 (904) 404-14-55				+	+
C 12/15		«Master»	8 (928) 126-63-66	+		+		
	, 110	«X »	8(8639) 27-80-47	+	+	+	+	+
77-	, 65	« »	8 (937) 717-93-36	+		+		
	, 65	« »	8 (8172) 70-03-45, 8 (8172) 54-21-54	+		+	+	+
	, 1	« »	8 (8172) 52-72-51	+		+		

72

46		« »	8 (473) 260-09-08, 8 (473) 240-57-73	+		+	+	
	, 13	« »	8 (38822) 6-23-32	+		+	+	+
	, 48	« »	8 (962) 655-20-00	+	+	+	+	+
	, 68	« »	8 (8313) 21-14-14	+		+		
	, 54	« »	8(8313) 20-56-00	+	+	+	+	
63		« »	8 (84235) 2-86-59, 8 (84235) 9-14-64	+		+	+	+
	, 84	« - »	8 (86132) 2-11-71, 8 (86132), 3-66-02	+	+	+	+	+
	, 55	« »	8(86132)5-05-00	+	+		+	+
	, 64	« - »	8 (343) 240-26-60	+		+		
7	, 201	«GOLD»	8-919-372-28-4			+		+
3	, 81	« - »	8(3955) 67-00-44, 8 (3955) 56-61-118	+		+	+	+
	, 22		8(86359) 4-32-23, 8 (86359) 4-06-42			+		
47		« »	8 (47467) 4-12-08, 8 (47467) 4-33-17	+		+		
45/6		« » -	8 (4932) 335185, 8 (4932) 335236	+	+	+	+	+
	, 4	« - »	8 (3412) 30 79-79, 8 (3412)30-83-07	+		+	+	+
	, 76	« - »	8 (3412) 78-76-85, 8 (3412) 78-06-64	+		+	+	+
	, 7/1, 301, 307	« - »	8 (3412) 44-60-40, 8 (3412) 44-60-67			+		
	« » 7	« 26»	8 (86545) 2-74-74			+		

73

(« »)								
24	« »	8 (8362) 24-11-24, 8(8362) 25-55-40	+	+	+	+		
24	« »	8 (3952) 42-55-76 8 (3952) 78-15-83	+		+	+		
56	« »	8 (3952) 28-74-50, 8 (3952) 76-71-75		+		+	+	
183	« »	8 (34551) 7-46-31						+
33	-	8 (3439) 39-95-20, 8 (34399) 34-74-40	+	+	+	+	+	
6	« »	8 (84457) 9-17-43, 8 (84457) 9-45-89	+	+	+	+	+	
157		8 (8734) 44-42-44	+	+		+	+	
53/2	-	8 (3842) 35-39-67	+			+		
17	« »	8 (87239) 2-33-55, 8 (87239) 3-01-77	+	+	+	+	+	
42	« - »	8 (8332) 56-25-95, 8 (8332) 54-70-77	+		+	+		
9	-	8 (988) 548-24-36	+		+			
9	-	8-928-172-52-26		+				
2,		8 (86142) 4-43-59	+	+	+	+	+	
1	« »	8-918-936-36-53		+		+	+	
3	-	8(861) 267-50-88	+	+	+	+	+	

55	103, « - »	8 (861) 222-64-13, 8 (861) 222-85-55, 8 (905) 408-08-38	+	+	+	+	+	
106	« »	8 (86156) 3-40-40, 8-918-990-35-04	+		+	+		
42/2		8 (918) 041-31-04, 8(86131) 71-2-72			+			+
116		8 (86164) 7-01-22		+				
57	« »	8 (86145) 3-78-74		+				+
25	« »	8 (86164) 65-4-95, 8-918-355-81-70	+	+		+	+	
1		8 (86153) 4-16-70		+				
168	« - »	8 (86151) 4-33-54, 8 (918) 464-00-86	+	+		+	+	
6	« »	8 (3912) 92-92-22, 8 (3912) 41-78-88	+	+	+	+	+	
1	« »	8 (3912) 93-54-33, 8 (3912) 94-52-82	+	+	+	+	+	
36 37	« +»	8 (4712) 50-85-90, 8 (4712) 35-04-91	+	+	+	+		
2	« »	8 (86169) 7-39-99, 8 (86169) 7-24-96	+	+	+	+	+	

66	« »	8 (4742) 33-45-65, 8 (4742) 33-45-95	+	+	+	+	+
, 25	« »	8 (8772) 55-62-38	+	+	+	+	+
, 20	« »	8 (8722) 93-30-73	+	+	+	+	+
, 11	« »	8 (86385) 2-33-26, 8 (960) 458-07-11	+	+		+	+
, 9	«X »	8-909-401-35-21	+	+	+	+	+
1534	« »	8 (499) 717-82-07, 8 (499) 717-82-12	+		+	+	+
, 3	« »	8 (495) 721-30-70, 8 (499) 168-05-19, 8 (499) 168-47-15	+		+	+	+
(30/05), 20	« »	8 (8552) 35-90-02, 8 (8522) 35-90-42	+	+	+	+	+
, 24	« »	8 (8662) 42-04-30, 8 (8662) 42-12-21	+		+	+	
, 55	« »	8 (86554) 5-59-77, 8 (86554) 3-67-57	+	+	+	+	+
, 10	« »	8 (34783) 3-43-44	+	+	+	+	+
(« »), 9	« »	8 (8555) 48-08-80, 8-917-906-60-06	+		+	+	+
, 18	« »	8 (831) 46-18-848		+			+
6	« »	8 (831) 46-18-848		+			+

, 18	« »	8 (3843) 20-31-33	+		+	+	+
, 21/27	« »	8 (48762) 6-46-46	+	+	+	+	+
, 14	« »	8 (8617) 6311-15, 8 (8617) 63-03-95	+	+	+	+	+
, 17	« »	8 (383)274-99-33, 8 (383) 274-99-45	+		+		
3, 63,	« »	8 (383) 210-59-49, 8 (383) 210-52-92	+		+	+	
24		8 (86369) 3-74-75, 8 (928) 609-35-85	+	+	+		
, 4		8 (3532) 36-87-94	+			+	+
194	« »	8 (3812) 36-74-01					+
130	« »	8 (3812) 36-42-02	+	+	+	+	
, 2	« »	8 (3537) 33-84-43, 8 (3537) 35-13-18	+	+	+	+	+
, 11	« »	8 (3537) 35-79-93	+	+	+	+	+
, 2	« »	8 (8412) 26-09-60, 8 (8412) 26-12-29	+		+	+	+
, 3,	« »	8 (342) 221-40-99	+	+	+	+	+
11	« »	8 (342) 240-93-35, 8 (342) 240-93-24		+			
, 11	« »	8 (8142) 78-06-93, 8 (8142) 70-65-48	+		+		
39-5		8 (3846) 69-33-00	+	+	+	+	+
, 11	« »	8 (8112)-53-86-30, 8 (8112) 53-86-50	+		+		
, 12		8-928-225-95-85		+		+	+

5-3	« »	8 (8793) 98-70-11	+	+	+	+	+
50		8 (47396) 48-911	+	+	+	+	+
37	« - »	8 (863) 250-47-77	+		+		
7	« - »	8 (863) 227-60-90, 8 (863) 299-00-50	+	+	+	+	+
50-1/52, 55	« »	8 (863) 21-92-112, 8-800-100-51-52	+	+	+	+	+
17		8 (906) 453-35-81	+		+		
12	« - »	8 (4855) 22-04-77, 8 (4855) 25-38-60	+	+	+	+	+
14	« »	8 (86370) 2-19-50	+	+	+	+	+
12	« »	8 (4855) 22-04-77, 8 (4855) 25-38-60	+	+	+	+	+
21	« »	8 (4855) 24-31-21	+	+	+	+	+
14, 1	« - »	8 (4912) 76-88-01, 8 (4912) 40-30-30	+	+	+	+	+
42	« - »	8 (4912) 41-33-02	+	+	+	+	+
100/56	« - »	8 (846) 990-37-51, 8 (846) 240-98-17	+		+	+	+
197	« XXI »	8 (812) 600-11-97	+	+	+	+	

41,	« - »	8 (812) 325-36-56, 8 (812) 325-36-57	+		+	+	
11, 36	95» « - »	8 (812) 822-18-00, 8 (812) 320-06-61	+				
1	« - »	8 (8342) 23-05-91, 8 (8342) 47-48-59	+	+	+		
95	« - »	8 (8452) 52-81-21, 8 (8452) 52-83-84	+	+	+	+	+
167/1		8 (951)-522-38-11	+	+	+	+	+
253	« »	8 (496) 547-04-95, 8 (496) 549-32-79	+	+		+	+
7	" -S"	8-963-624-49-46				+	+
44	« »	8 (4812) 45-05-13, 8-920-333-09-44	+	+	+	+	+
90	« »	8 (8622) 55-51-19, 8 (8622) 55-01-08	+			+	+
63	« »	8 (8652) 24-30-14, 8 (8652) 23-31-81	+	+	+	+	+
15, 21	« »	8 (8652) 95-53-68, 8 (8652) 95-61-90				+	
1	« - »	8 (4725) 24-62-27, 8 (4725) 24-73-49	+	+	+		
158	« - »	8 (3473) 20-12-13, 8 (3473) 20-27-70	+			+	+
25	« »	8 (8212) 22-95-29, 8 (8212) 29-12-20	+	+	+	+	+

137	« - 2000»	8 (4752) 56-19-42, 8 (4752) 56-19-44	+	+	+	+	+
24/2		8 (86130) 4-86-59, 8-(918) 147-02-03	+	+		+	+
, 2/2	« - »	8 (86196) 7-20-53	+	+	+	+	+
, 48	« +»	8 (8482) 22-72-41, 8 (8482) 22-71-85, 8 (8482) 61-65-64	+	+	+	+	+
, 58	« -2»	8 (3822) 56-23-35, 8 (3822) 48-08-80	+		+		
, 137	« - »	8 (4872) 31-12-57	+	+	+	+	+
, 55	« »	8 (3452) 47-35-69	+		+	+	+
, 28	« »	8 (3012) 21-89-63	+		+	+	+
16/7	« - »	8 (8422) 73-44-22, 8 (8422) 73-29-19	+	+		+	+
378	« - »	8 (87875) 7-44-82	+	+	+	+	+
, 6/1	« - »	8 (347) 236-57-07	+		+		
148	« »	8 (3472) 77-12-62	+		+		
, 153, , 42, , 7	« »	8 (347) 279-90-70, 8 (347) 241-62-02					+
, 15	« - »	8 (86391) 2-18-06	+		+		
, 36	« »	8 (8352) 62-30-97, 8 (4942) 63-20-98	+		+		
, 8	-	8 (351) 239-39-34, 8 (351) 239-39-35	+	+	+	+	+

18	« »	8 (8202) 54-31-88	+		+	+	+
340 « »	« - »	8 (8782) 27-30-60, 8 (8782) 27-70-77	+	+	+	+	+
, 48, , 11	« »	8 (8782) 25-04-66, 8 (8782) 25-19-15	+	+	+	+	+
, 33	« »	8 (3022) 36-39-36, 8 (3022) 36-39-32	+	+	+	+	+
, 1		8 (904)-345-83-18	+	+	+	+	+
, 3- , 21	« »	8 (84722) 9-52-07, 8 (937) 469-52-07	+	+	+	+	+
, 57	« - »	8 (8453) 55-80-89, 8 (964) 848-45-06	+		+	+	+
, 12	« - »	8 (4852) 25-94-83	+		+		

«Saturn Home Appliances»

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.
- 9.
- 10.
- 11.

« Saturn Home Appliances» .

: <http://saturn.ua>,
0-800 502-502

, 36	(06442)-91137, 0990521001	Hi-Fi ()	+	+	+	+	+	-	+	
, 42	(06274)-49128, 0627449129	-	+	+	+	+	+	-	+	
50- , 82	(04563)-68413	-	+	+	+	+	+	-	+	
28	(0456)-333295, (0456)-309400, 094-9299400	-	-	+	+	+	+	-	-	
, 57	(04143)-40636	" "	+	+	+	-	+	+	+	
, 43	(03141)-43432	" "	+	+	+	+	-	-	-	
, 50 , 51	(0432)-699573		+	+	+	+	+	+	+	
, 3	(0432)-642457, (0432)-642622		-	+	+	-	-	-	-	
, 1	(0432)-509191, (0432)-579191, 066-3509191 096-0509191	-	+	+	+	+	+	-	+	
, 16	(0432)-464393, (0432)-468213, (0432)-519254	-	+	+	+	+	+	+	+	
, 43	067-7899525	-	+	+	+	-	-	-	-	
, 62-	(05653)-52771		+	+	+	+	+	+	+	

,59	(0562)-350409, (0562)-346705		+	+	+	+	+	-	+
,6	(056)-7356328, (056)-7356325	-	+	+	+	+	+	-	+
,46-	(056)-7854002, 067-5071964	-	-	+	+	+	+	+	-
,41-	(056)-7900460	-	+	+	+	+	+	-	+
129-	066-2493639	-	+	+	+	-	-	-	+
,1	.066- 5082652, 096-7232447	-	+	+	+	+	+	+	+
,188	(062)-3450607	-	+	+	+	+	+	-	+
24	(0412)-470742	C ()	-	-	+	+	+	-	-
,8	(0412)-471568, 067-4115812	- (")	+	+	+	-	-	-	+
,175	(061)-7875051, (0612)-639790		+	+	+	+	+	+	+
83	(0612)-120303	-	+	+	+	+	-	-	+
,50	(061)-2209764, (061)-2209765	- -	+	+	+	+	+	-	+
223	(0342)-756040, (0342)-712813		+	+	+	+	+	-	-
,19-	(0342)-559525, (0342)-750777		+	+	+	+	-	-	-
2	067-3248218	" - "	+	+	+	+	+	+	+

,76	(04597)-57393	" "	+	+	+	-	-	-	-
,161	067-3248401, 067-3248365, (04736)-62949	« - - »	+	+	+	+	+	+	+
,16	(044)-4269198, (044)-3629198	" "	+	+	-	-	-	-	+
,55	(044)-3641463, (044)-4086660, (044)-4972936, (044)-4973455, (044)-4973619, (044)-4086658, (044)-4086659	- -	-	+	+	+	+	+	-
1-	(044)-5911190	" "	+	+	+	+	+	+	+
,15	(06561)-62102, 096-3852181		+	+	+	-	-	-	+
,2	(0522)-357923, (0522)-278002, (0522)-273300		+	+	+	+	+	-	+
1-	(0522)-272840, (0522)-277667	- (-)	+	+	+	+	+	+	+
13	097-7766770 097-2642167		+	+	+	+	+	+	+
,10	(06272)-26223, (06272)-22186, 050-2796816	()	+	+	+	-	-	-	-
,2-	(04142)-50504	" "	-	+	+	+	+	+	+
,7	050-5260668	-	+	+	+	+	+	+	+
,3	(06264)-59389		+	+	+	+	-	+	-
	050-9732014	-	+	+	+	+	+	-	+

. 20 , 8										
. , 5-	(0626)-412134, 067-2557990		+	+	+	+	+	+	+	+
44, 2	(05366)-39192		+	+	+	+	+	+	+	+
. , 42	(056)-4013356, (056)-4040080, (056)-4746103	" - "	+	+	+	-	+	+	-	
. , 73	(056)-4400764	" "	+	+	+	+	+	-	+	
. , 64/7	(056)-4400779		+	+	+	+	+	-	+	
. , 9	(056)-4092302, (056)-4092303	(-)	+	+	+	+	+	+	+	
81	050-2149173, 066-017-02-03		+	+	+	+	+	+	+	
96-	(0642)-330242, (0642)-331186, 095-3868985	" "	+	+	+	+	+	+	+	
. , 49-	(0642)-505783, 095-3624248		+	+	+	+	+	+	+	
. , 61	066-0640564, 050-5809230		-	-	-	+	-	-	-	
. , 1	(06434)-26025, 099-2710147	- -	+	+	+	+	+	+	+	
1	(0332)-290752	" - "	+	+	+	-	-	-	+	
15-	(0332)-779955, 097-0482596	-	+	+	+	+	+	+	+	
15-	(032)-2445340, (032)-2445344		+	+	+	+	+	+	+	

. , 2	(032)-2471499	-	+	+	+	-	-	+	+	
. , 28	(032)-2395152, (032)-2395577, (032)-2955028, (032)-2955029	" - "	+	+	+	+	+	+	+	
116	(032)-2458052	" - "	+	+	+	-	-	+	+	
. , 242	(0623)-225550, 066-1032288, 097-7768120		+	+	+	-	-	-	-	
. 50- , 32\18	(0629)-496005, (0629)-493006		+	+	+	+	+	-	+	
227	(0629)-473000, . 098- 3122628, 095-0282628	" - " (-)	+	+	+	+	+	-	+	
. , 84	(0629)-491881, 067-5975615		+	+	+	+	+	-	+	
. , 42	(0619)-444400	(-)	-	+	+	+	+	+	+	
51-	(04337)-64847, (0432)-468213		+	+	+	+	+	+	+	
46	(03131)-37337, (03131)-37336, 099-7974430, 097-3423551		+	+	+	-	+	+	-	
. , 33	(0512)-470496, (0512)-478348	" "	+	+	+	+	+	+	+	
. , 2	(0512)-580647		+	+	+	+	+	+	-	
. , 49	(0512)-582180, 067- 5170570,	" "	-	+	+	+	+	+	-	

	066-7056444								
2	(05662)-41503, 099-0743553	" - - " ()	+	+	+	+	+	+	+
189	(0566)-688563, 050-5800296		+	+	+	+	+	+	+
25	(0566)-687014		-	+	+	+	+	+	+
	, 38 095-7247266		+	+	+	+	+	+	-
38	(04141)-52010	" "	+	+	+	+	+	-	+
	(048)-7001737 (048)-7874579		+	+	+	+	+	+	+
	, 90								
55	(0482)-390618, 094-8390619		+	+	+	+	+	-	+
27	(048)-7229779 (048)-7712538, (048)-7227066		+	+	+	+	+	+	+
	, 2 (66)		+	+	+	-	-	-	+
172-	(05632)-61554, (05632)-62342		+	+	+	+	+	-	+
	096-2840836, , 75 066-0857539		+	+	+	+	+	+	+
	(0532)-694262, , 29 099-601424		+	+	+	+	+	+	+
120	(0532)-509889, 050-0137217		+	+	+	+	+	-	+

	, 66 (0532)-615621	-	+	+	+	+	+	+	+
	, 64 099-4243675	-	+	+	+	+	+	+	+
	(04637)-38595, 095-8862199, , 101/1 063-5974127, 067-2725751	-	-	+	+	+	+	+	+
	, 12 (0362)-266585	-	-	+	+	+	+	+	-
55	(0362)-436452, (0362)-635489, 067-2385635	-	-	+	+	+	+	+	+
	, 12 097-7804458	-	+	+	+	+	+	+	-
	, 5 (0362) 433340, 067-3604242		+	+	+	+	+	+	+
14	(06563)-22183, 050-9045717	-	+	+	+	+	+	+	+
	, 1 (06434)-26025, 099- 2710147	-	-	+	+	+	+	+	+
26-	(0692)-555643 (0692)-453699		+	+	+	+	+	+	+
	, 24 (06452)-50533, 050-6037272	-	+	+	+	+	+	+	+
17/1	(0652)-522771, (0652)-544573	" - " "	+	+	+	+	+	+	-
	, 72 (0652)-690778	-	+	+	+	+	+	+	+
	, 32 (04733)-46182	-	+	+	+	+	+	+	+

	(06444)-40289, 066-1053966	-	+	+	+	+	+	-	+
171- \10	(03245)-58381	-	+	+	+	-	-	-	-
, 19	096-3400696		+	+	+	+	+	+	+
, 2	067-3576378, 050-5124887	" "	+	+	+	+	+	+	+
1/24	(04744)-46614, (04744)-46134	" "	+	+	+	-	-	-	-
3/2	(0312)-654266, 099-5575307	-	+	+	+	+	+	+	+
, 3	(057)-73497 24, (057)-7125181		+	+	+	+	-	+	-
, 12	(057)- 71713 39, (057)-7021620	-	+	+	+	+	+	+	+
18 (, 42)	096-5953746	" "	+	+	+	-	-	+	+
, 25	(057)-7513432, (057)-7643383, 067-5757009		-	-	-	+	+	-	-
, 35	(0552)-420235	-	-	-	-	+	-	-	-
, 28-	(0552)-434040, 050-4946043		+	+	+	+	+	+	+
23	(0552)-296042		+	+	+	+	+	+	+
, 7	(0382)-664501, .0630750889	-	+	+	+	-	-	+	+
2	(0382)-704700, (0382)-704707, (03822)-664616	-	+	+	+	+	+	-	-

18	(0382)-783773, (0382)-783755		+	+	+	+	+	+	+
146, 102	(0472)-563478, (0472)-500354, (0472)-564216, 096-5056363	" "	+	+	+	+	+	+	+
71	(0472)-314657, (0472)-565621	" "	+	+	+	-	-	-	+
. 77- , 1	(0462)-601585	" "	+	+	+	+	+	-	-
265-	(0372)-584301, (0372)-584249	" "	+	+	+	+	+	-	+
101	(0372)-571204, 066-6604161	-	+	+	+	+	+	+	+
, 105	(0372)-554869, 050-4345529		+	+	+	-	+	+	+
, 3	(03840)-40017, 067-3601632		+	+	+	+	+	+	+
3	(0654)-343051, (0654)-343160, 095-7307151	" "	+	+	+	+	+	-	+

GB

WARRANTY COUPON

When purchasing the product,
please require its checking before you;

BE SURE

that the goods sold to you, are functional and complete
and that the warranty coupon is filled in correctly.

This warranty coupon confirms the absence of any defects in the product you purchased and provides for free of charge repair of the product failed through the fault of the manufacturer throughout the period of warranty service and free of charge repair.

Failing the presentation of this coupon, in case of its improper filling in, infringement of factory seals (if any), and also in cases indicated in the warranty obligations, the claims are not accepted, and no warranty service and free of charge repair is made!

The warranty coupon is valid only in the original copy with the stamp of trading organization, signature of the seller, date of sale and signature of the buyer.

Complex home appliances should be installed by supplier's authorized service centers, authorized specialists. In the case of a malfunction of the home appliance because of incorrect installation, the buyer must pay the cost of the visit (call) of the specialist, as well as the cost of fault diagnostics if necessary.

CZ

ZÁRUČNÍ LIST

Při koupi výrobku
žádejte o jeho vyzkoušení ve Vaší přítomnosti,

PĚSVDTESE

že Vám prodaný výrobek je dobře fungující a kompletní
a že záruční list je vyplněn správně.

Tento záruční list potvrzuje, že na Vámi koupeném výrobku nejsou žádné vady a zajišťuje bezplatnou opravu nefungujícího přístroje z viny výrobce, během celé záruční doby.

Bez předložení tohoto listu, při jeho nesprávném vyplnění, porušení plomb výrobce (jsou-li na výrobku) a také v případech, které jsou uvedené v záručním listě, nároky se nepřijímají a záruční oprava se neprovádí!

Záruční list je platný jenom jako originál s razítkem obchodní organizace, podpisem prodávajícího, termínem prodeje a podpisem zákazníka.

Instalace komplexní spotřebiče musí být provedena autorizovaným servisním střediskem, specialistou. V případě poruchy v důsledku nesprávné instalace výrobku, kupující je povinen uhradit náklady na výjezd (volání) odborný, pokud je to nezbytné, a náklady na diagnostiku poruch.

RU

(),

!

()

UA

(),

!

()

Saturn®

WARRANTY COUPON

ZÁRU NÍ LIST

SATURN HOME APPLIANCES S.R.O. KON VOVA 141, 13083
PRAHA 3 – ŽIŽKOV, ESKÁ REPUBLIKA, TEL: + 4202/ 67 108 392

Model/

Serial number/Sériové číslo/

Date of sell/Termin prodeje/

Shop stamp/Razítko obchodu/

Seller's signature/Podpis prodávatele/

Buyer's Signature confirming the acquaintance and consent with terms of free of charge maintenance service of the product, and absence of the complaints on appearance and color of the product.

Podpis zákazníka, potvrzující seznámení a souhlas s podmínkami bezplatného záručního servisu výrobku, a také neexistence nároků na vnější vzhled a barvu výrobku.

ВІДМІТКИ ПРО ВСТАНОВЛЕННЯ ВИРОБУ*

Дата встановлення	Назва організації, СЦ	№ наряду	ПІБ та підпис майстра	
			ПІБ та підпис споживача**	

*Побутові прилади, для введення в експлуатацію котрих необхідні установочні, монтажні роботи, повинні вводитись в експлуатацію уповноваженими спеціалістами сервісних центрів постачальника. В разі виникнення несправності виробу з причини некоректної установки вироб може бути знятий з гарантійного обслуговування, а покупець повинен сплатити вартість виїзду (включку) фахівця, а в разі необхідності і вартість діагностування несправності.

ВІДМІТКИ ПРО ПРОВЕДЕННЯ СЕРВІСНОГО ОБСЛУГОВУВАННЯ

Дата прийому в ремонт	Заявлений споживачем недолік	№ наряду	Назва організації, СЦ	Перелік виконаних робіт	Перелік встановлених запчастин	Дата завершення ремонту	ПІБ та підпис майстра	
							ПІБ та підпис споживача**	

** Підпис споживача свідчить про приймання виробу в робочому стані.

ОТМЕТКИ ОБ УСТАНОВКЕ ИЗДЕЛИЯ*

Дата установки	Название организации, СЦ	№ наряда	ФИО и подпись мастера
			ФИО и подпись потребителя**

*Бытовые приборы, для ввода в эксплуатацию которых необходимы установочные, монтажные работы, должны вводиться в эксплуатацию уполномоченными специалистами сервисных центров поставщика. В случае возникновения неисправности по причине некорректной установки, изделие может быть снято с гарантийного обслуживания, а покупатель должен оплатить стоимость выезда (вызова) специалиста, а в случае необходимости и стоимость диагностики неисправности.

ОТМЕТКИ О ПРОВЕДЕНИИ СЕРВИСНОГО ОБСЛУЖИВАНИЯ

Дата приема в ремонт	Заявленный потребителем недостаток	№ наряда	Название организации, СЦ	Перечень выполненных работ	Перечень установленных запчастей	Дата завершения ремонта	ФИО и подпись мастера
							ФИО и подпись потребителя**

** Подпись потребителя свидетельствует о приеме изделия в рабочем состоянии.

NOTES ABOUT THE INSTALLATION OF THE DEVICE*

Installation date	Name of organization, Service Center	Order No	Master's surname, name, patronymic and signature
			Client's surname, name, patronymic and signature**

* Household appliances for commissioning of which installation and mounting works are required should be commissioning by the supplier's authorized service center specialists. In the case of a malfunction of the product because of incorrect installation, the product may become invalid for warranty service, and the buyer must pay the cost of the visit (call) of the specialist, as well as the cost of fault diagnostics if necessary.

NOTES ABOUT CARRYING OUT OF SERVICE MAINTENANCE

Date of receipt for repair	Client's declared problem	Order No	Name of organization, SC	List of performed work	List of installed spare parts	The repair end date	Master's surname, name, patronymic and signature
							Client's surname, name, patronymic and signature**

** Client's signature certifies about the appliance's receipt at the working condition.

Saturn Model/ /	Saturn Model/ /	Saturn Model/ /
Date of sale/ /	Date of sale/ /	Date of sale/ /
Serial number/ /	Serial number/ /	Serial number/ /
Name of the Trade company and Stamp/ /	Name of the Trade company and Stamp/ /	Name of the Trade company and Stamp/ /
... / Stamp	... / Stamp	... / Stamp
Customer's address, phone#, name, surname/ / , , ,	Customer's address, phone#, name, surname/ / , , ,	Customer's address, phone#, name, surname/ / , , ,
Date of Receiving/ /	Date of Receiving/ /	Date of Receiving/ /
Date of Return/ /	Date of Return/ /	Date of Return/ /
Defect / /	Defect / /	Defect / /
Stamp of the Service Center, signature/ / , ,	Stamp of the Service Center, signature/ / , ,	Stamp of the Service Center, signature/ / , ,
... / Stamp	... / Stamp	... / Stamp
COUPON 1	COUPON 2	COUPON 3